

SPOT GEN3 BUTTONS / S.O.S. BUTTON TESTING INSTRUCTIONS



Following these instructions will ensure the S.O.S. button as well as the other buttons on your SPOT Gen3 are operating properly.

There are four important requirements that need to be followed prior to testing the buttons/LED lights:

- a. Perform button test inside a building in case S.O.S. is accidentally activated when pressing the buttons.
- b. Ensure SPOT Gen3 has fresh Energizer Ultimate Lithium batteries.
- c. Ensure the unit is turned off.
- d. Read through the button test steps prior to starting the test.


To test the buttons/LEDS on your device, follow the steps below:

NOTE: Once the HELP and S.O.S. LEDs turn green, you will have approximately 5 seconds to complete step 2 and another 5 seconds to complete step 3. Otherwise, the test sequence will time out and you will have to start over.

1. Press & hold the **TRACK button** followed by the **POWER button**. Hold for approximately 3 seconds. The HELP and S.O.S. LEDs should turn **green**.
2. Press & hold the **S.O.S.** and **HELP buttons** at the same time. All LEDs should turn **red**.
3. Press & hold the **CUSTOM MESSAGE** and **CHECK IN buttons** at the same time. All LEDs should turn **green**.
4. After you complete the buttons/LED test, go outside & send a Check In message.

STEP 1

Press Track first, then Power.

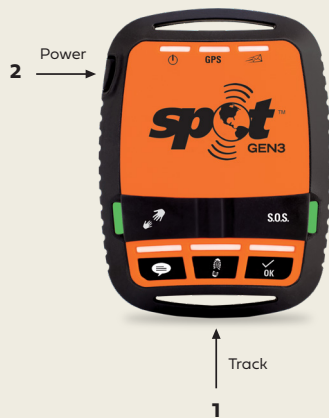

STEP 2


S.O.S. and Help buttons should be pressed at the same time.



STEP 3

Custom Message and Check In buttons should be pressed at the same time.



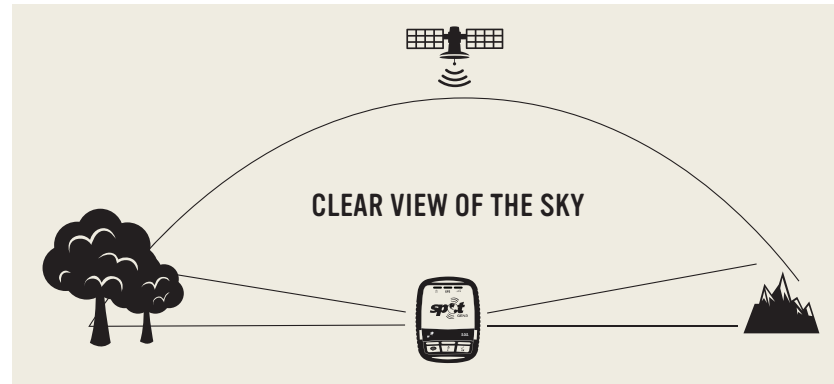

BUTTON TEST LED COLOR CHART

BUTTONS PRESSED	HELP LED	S.O.S. LED	POWER LED	GPS LED	SEND LED	CUSTOM MESSAGE LED	TRACK LED	CHECK IN LED
TRACK + POWER	GREEN	GREEN	N/A	N/A	N/A	N/A	N/A	N/A
S.O.S. + HELP	RED	RED	RED	RED	RED	RED	RED	RED
CUSTOM MESSAGE + OK	GREEN	GREEN	GREEN	GREEN	GREEN	GREEN	GREEN	GREEN

For over-the-air S.O.S. testing, go to [SPOT My Account](#).

*Device must be active.

For S.O.S. LED/button testing related to other SPOT devices, please contact Customer Relations at [1-866-651-7768](tel:1-866-651-7768).